


Headlights

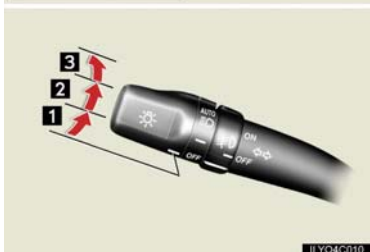

- 1 Parking lights, license plate lights, tail lights, side marker
- 2 Parking lights, license plate lights, tail lights, side marker and headlights
- 3 Headlights come on automatically according to the surrounding light level



Push the lever forward to activate the high beams.
Pull and hold the lever to temporarily activate the high beams.

n Adaptive Front Lighting System (AFS)



The headlights are set to automatically move left or right to match the turning angle of the vehicle.
Press the "AFS OFF" button to cancel the system.


The indicator light comes on when the system is off.

Fog Lights



1 OFF

2 ON

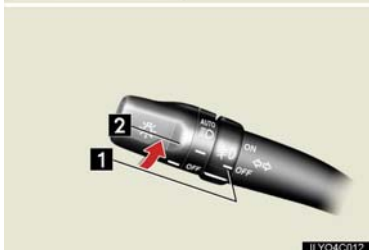

Headlight Cleaner



Can be used when the headlights are on and the engine switch is in the "ON" position.

Windshield Wipers and Washers

n Variable intermittent wipers



- 1 Intermittent operation
- 2 Low speed
- 3 High speed
- 4 Washer fluid



ILYQ4C014

Intermittent operation: Wiper interval can be adjusted by turning the band.



ILYQ4C015

To spray washer fluid, pull the lever. The wipers will operate automatically.



ILYQ4C016

Rear Window and Outside Mirror Defoggers



Press the switch to defog the outside mirrors and rear window.

Press again to cancel.

The system will automatically turn off after 15 minutes.

Instrument Panel Light Control



- 1 Darker
- 2 Brighter